

PROGRESSION TO THE PEOPLE



INSPIRED BY NATURE // DRIVEN BY THE ELEMENTS // FLYOZONE.COM

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM					
LINE NO.	7M	9M	11M	13M	15M
A1	930	1070	1240	1355	1505
A2	480	540	595	640	705
A3	630	705	780	845	925
A4	775	875	960	1035	1135
AL1	665	750	830	895	980
AL2	710	800	880	950	1040
KL	510	570	645	700	750
A5	930	1035	1170	1200	1290
Y1	1300	1560	1620	1750	1910
YL1	960	1050	1360	1455	1590

AMP V1 RIGGING DIAGRAM

YELLOW = 4-LINE BRIDLE MODE

GREEN= 5-LINE MODE

