

## CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE.  
USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

### RECOMMENDATIONS


- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

**BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM**

	4m	5m	6m	7m	8m	9m	10m	11m	12m	14m
A1	640	820	810	865	930	995	1040	1210	1145	1170
A2	330	380	410	440	470	500	525	550	575	620
A3	440	490	540	580	620	655	690	730	760	820
A4	585	660	760	810	870	960	990	1030	1090	1180
AL1	685	770	840	905	970	1030	1080	1135	1185	1280
AL2	685	770	840	905	970	1030	1080	1135	1185	1280
KL	400	440	480	520	560	590	620	650	680	770

### ENDURO V2 - 4/5M RIGGING DIAGRAM

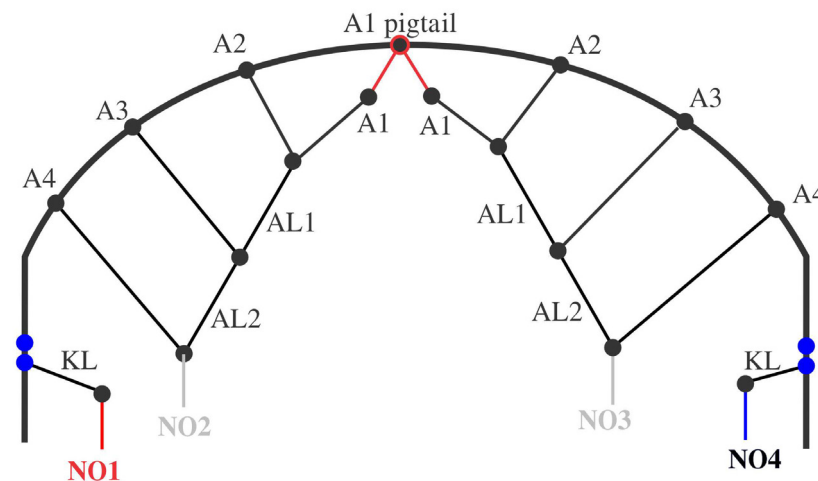

### ENDURO V2 - 6/7/8/9/10/11/12/14M RIGGING DIAGRAM

