

ACCESS_{v7}



CHECKING BRIDLES AND SPEED SYSTEM FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES AND SPEED SYSTEM TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS ON THE NEXT PAGE TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS



- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles as in the image.
- Print out the sheet and write down any differences.

If your bridles are out by more than 15mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

SPEED SYSTEM ZERO POSITION

You can check your Speed System lines by levelling the front and back line pigtails, then tension the three top ends of the Speed System where the bridle lines are attached, they should be at the same level + or - 15mm. See picture below.


If the difference between the three ends is bigger than 15mm you should replace your Speed System.

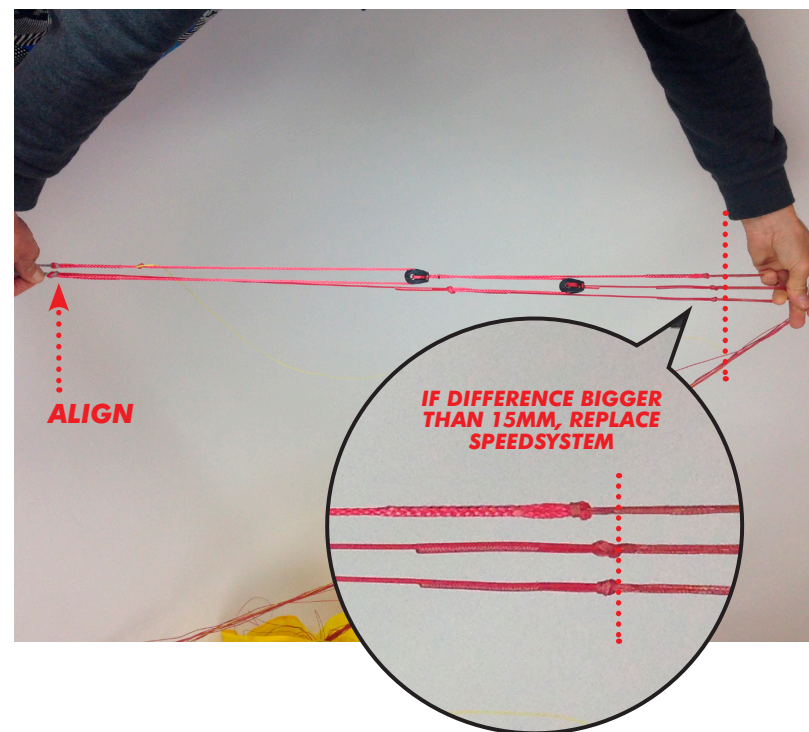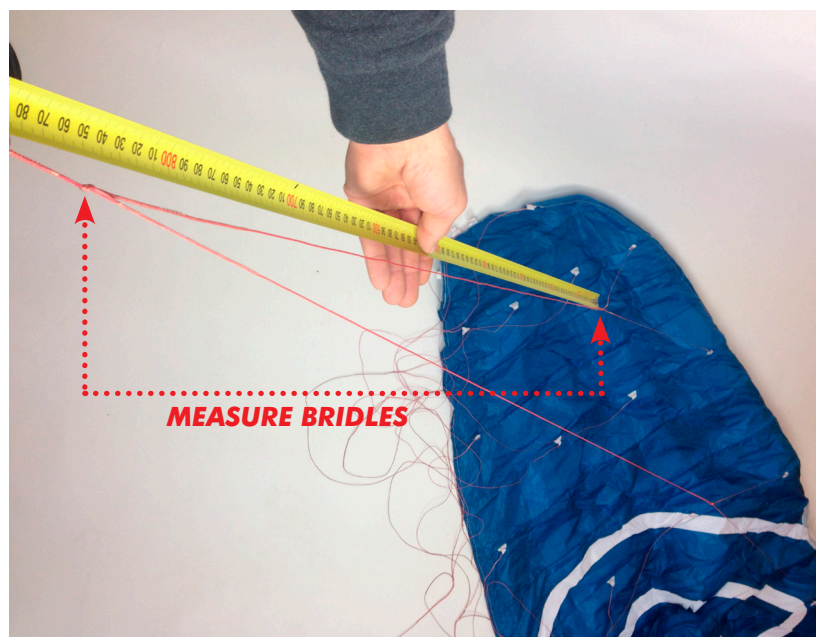


BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	4m	6m	8m	10m	12m
A1	793	1014	1147	1327	1502
A2	686	881	993	1152	1308
A3	599	771	869	1009	1146
A4	620	788	898	1049	1157
A5	473	605	686	807	888
A6	386	495	564	661	727
B1	775	990	1119	1294	1464
B2	669	858	967	1121	1272
B3	584	752	847	982	1116
B4	614	780	888	1036	1141
B5	474	606	687	806	886
B6	390	500	568	666	732
B7	1007	1262	1449	1668	1856
C1	847	1080	1222	1409	1590
C2	737	943	1063	1228	1390
C3	642	824	929	1073	1216
C4	677	859	978	1136	1251
C5	529	674	766	893	981
C6	427	546	620	725	795
C7	1063	1331	1528	1755	1951
AM,BM1,CM1	980	1200	1400	1600	1750
AM2,BM2,CM2	770	950	1100	1250	1400
K1	953	1242	1441	1623	1809
K2	639	857	996	1113	1245
K3	506	673	768	867	990
K4	364	496	563	633	731
K5	272	379	429	481	561
KML1	650	780	900	1050	1150
KML2	450	550	650	750	800
KR1	1320	1450	1570	1700	1810
AR1	210	260	300	350	380
BR1, CR1	210	260	300	350	380
ISL	1600	2000	2200	2600	3000
LSL	2650	2800	3220	3500	3800

ACCESS V7 RIGGING DIAGRAM

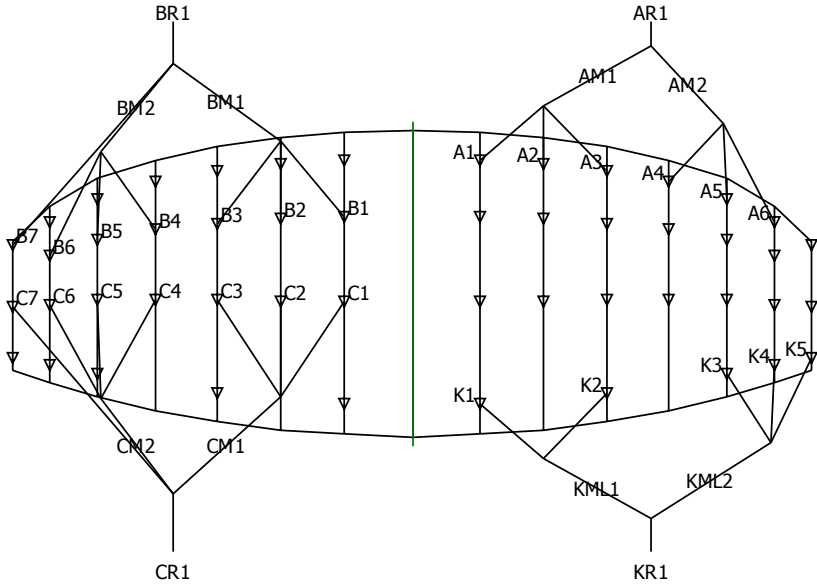

SPEED SYSTEM

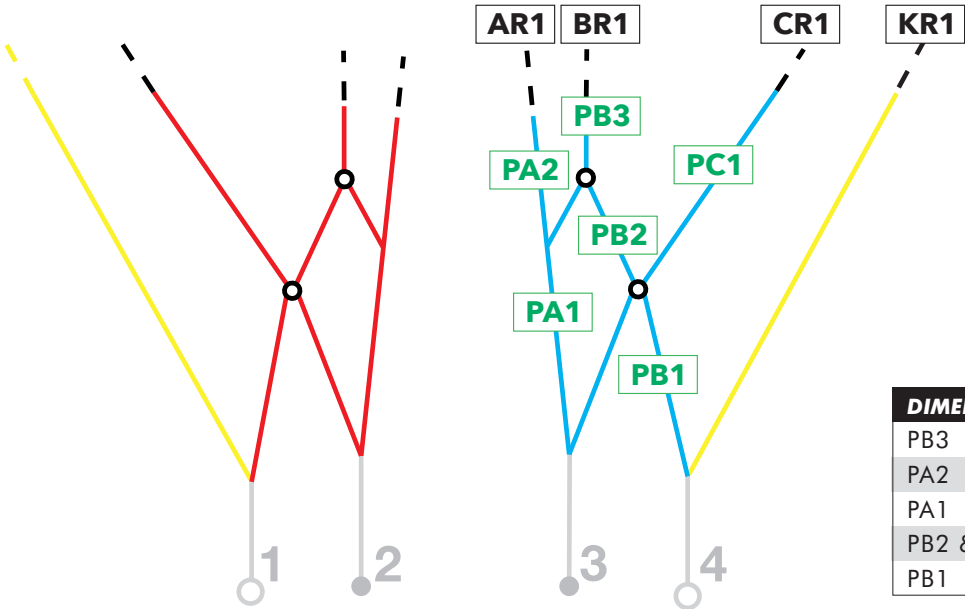

DIMENSIONS:	
PB3	245
PA2	373
PA1	530
PB2 & PC1	405
PB1	960